

NEC ELITE 48 | NEC ELITE 192 | NEC IPK

TIME CHANGE INSTRUCTIONS

The instructions for changing the time are the same for these systems.

Note: Change the clock from the attendant's station -- usually extension 10, 100, or the first extension in the extension number range (i.e., 200 for 200 to 299 range , etc.) -- with handset resting on the cradle and the phone not in use.

Press **FEATURE** button

Dial 9 #

Enter the hour and minute by using the dial pad

Press **RECALL** button to change AM / PM setting

Press **HOLD** button to change to calendar settings

or

Press Feature button to exit

Press **RECALL** to select day of week

Press # to move the cursor to day of month field

Enter day of month by using dial pad

Press **RECALL** button to select month

Press # to move the cursor to the year field

Enter last two digits of year by using dial pad.

Press **FEATURE** to exit